	<b>Document</b>  <b>Technical Specification</b>	<b>version: v1.02</b> <b>status:</b> <b>date: 2012-03-12</b>
<b>project title: Reader Suite - Installing Driver</b>		<b>doc</b>

## 1 Introduction

In some conditions the setup does not succeed in installing the RF-Embedded driver on the system. For this case the next chapters show how to install or activate the driver manually.

## 2 Linux


The most common Linux distributions come with an integrated module called “usbserial”. This module handles the translation from USB to serial. The only thing that has to be done to use this module with the RF-Embedded devices, is to tell the system to load the module once a RF-Embedded device is plugged in. This can be done by entering the following line into the terminal:

```
sudo modprobe usbserial vendor=0x1325 product=0xc02a
```

Note: Only root users can do this.

After the system was told to load this module for RF-Embedded devices and a device was plugged in, it can be located at /dev/ttyUSB0 .

20120312_EN_UM - Reader-Suite - Installing Driver_v1.02.docx	<b>created by: Stefan Detter</b>	<b>page: 2 von 4</b>
---	----------------------------------	----------------------



	<b>Document</b>  <b>Technical Specification</b>	<b>version: v1.02</b> <b>status:</b> <b>date: 2012-03-12</b>
	<b>project title: Reader Suite – Installing Driver</b>	<b>doc</b>

### 3 Windows 7 (x86, x64)

To install the driver manually, you first need to open the Device Manager. The Device Manager can usually be found in the System Properties Dialog.

Once the Device Manager is open and the driver was not installed before, the plugged in reader is shown in the “Other devices” section.

The next step to install the driver is to open the properties of this device. This is done by right-click and selecting Properties. If this is selected, the following dialog opens up.

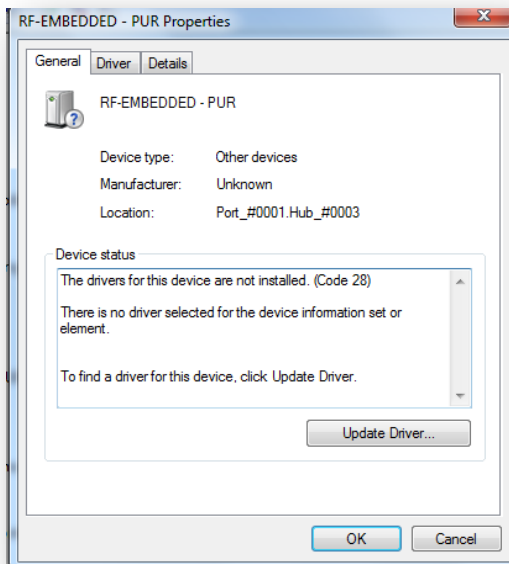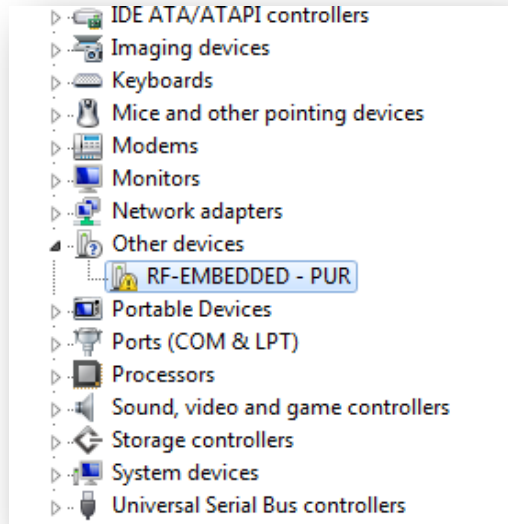



Once the dialog is opened, the next step is to install the driver for this device. To do this, click “**Update Driver...**”. This opens the install dialog.


The install dialog shows two options to install the driver:

- Search automatically...
- Browse computer...

In this case the driver was copied to the computer during the installation, so select “**Browse my computer...**”.


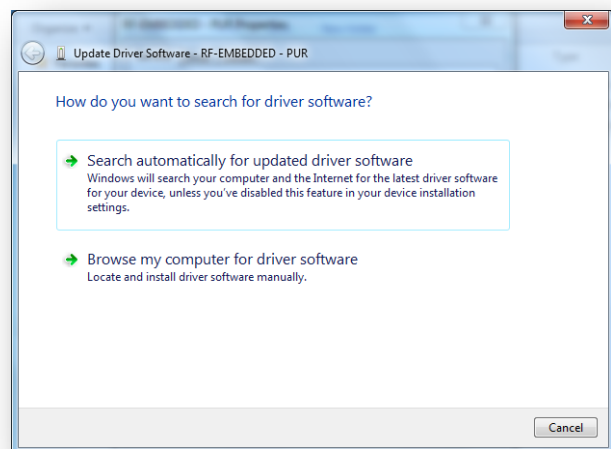


	<b>Document</b>  <b>Technical Specification</b>	<b>version: v1.02</b> <b>status:</b> <b>date: 2012-03-12</b>
	<b>project title: Reader Suite – Installing Driver</b>	<b>doc</b>

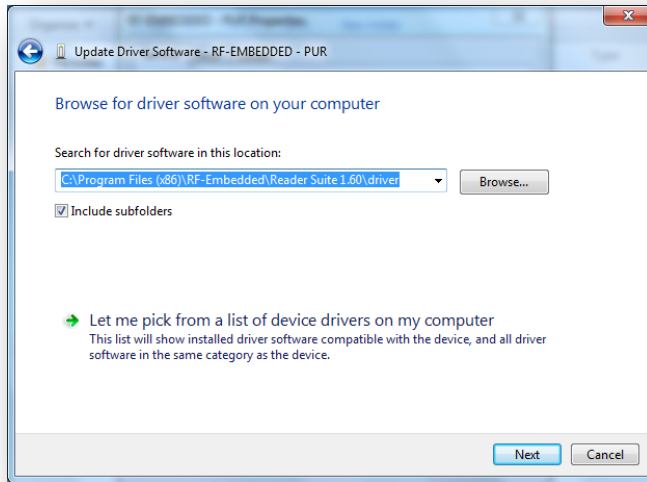

In the next dialog just select the installation directory of the Reader Suite and the sub directory “**driver**” and press next.

Next up a dialog of the operating system opens that asks if the driver should be installed though it is not signed. To proceed the installation, press “**Install this driver...**”.

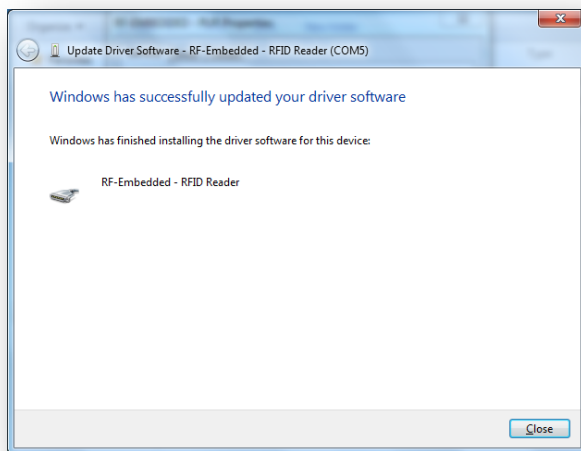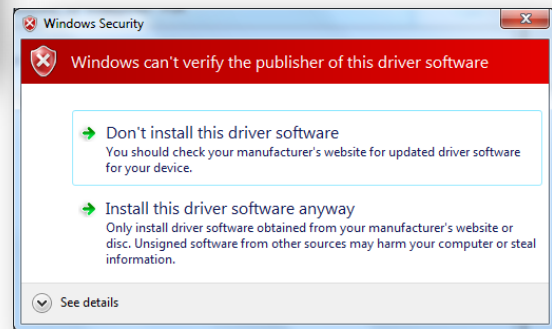

After a few moments the result of the installation is shown. If this was successful, the device can now be used.

20120312_EN_UM - Reader-Suite - Installing Driver_v1.02.docx	<b>created by: Stefan Detter</b>	<b>page: 4 von 4</b>
---	----------------------------------	----------------------